${\color{blue} COMPETENCY\ ANALYSIS\ PROFILE} \\ {\color{blue} Refrigeration\ and\ Air\ Conditioning\ Systems\ Mechanic\ -\ Branch\ 1-313A} \\$

(All unshaded skill sets must be demonstrated/completed)

SKILL SETS

PROTECT SELF AND OTHERS	Identify, interpret, and comply with safety directives	Wear, adjust, and maintain personal protective equipment	Practise good housekeeping in the workplace	Handle and dispose designated substances and refrigerants	Follow fire safety procedures
6238.0	6238.01	6238.02	6238.03	6238.04	6238.05
	Operate emergency safety equipment	Follow first aid procedures	Report injuries	Lock out equipment for repair or maintenance	Work within safe physical limits
	6238.06	6238.07	6238.08	6238.09	6238.10
	Operate material handling equipment	Operate worker elevating platforms	Handle and transport compressed gases and equipment		
	6238.11	6238.12	6238.13		

PLAN AND PREPARE FOR INSTALLATION, MAINTENANCE, OR SERVICE OF REFRIGERATION & AIR CONDITIONING (R&AC) SYSTEM	Read and interpret job documentation	Identify type of R&AC system	Identify and select R&AC system components and equipment	Identify design parameters of R&AC system	Calculate the R&AC system operating parameters
6239.0	6239.01	6239.02	6239.03	6239.04	6239.05
	Identify and select R&AC system operating controls	Identify and select R&AC system safety controls	Identify and select R&AC system functional controls	Identify and select R&AC system accessories	Identify and select welding, cutting, brazing, soldering, or purging equipment
	6239.06	6239.07	6239.08	6239.09	6239.10
	Identify and select hand tools	Identify and select power tools	Identify and select electrical measuring devices	Identify and select R&AC pressure, temperature, and flow measuring devices	Identify and select R&AC specialty instruments
	6239.11	6239.12	6239.13	6239.14	6239.15
	Identify and select R&AC precision measuring instruments	Identify and select the R&AC installation and material handling equipment	Identify and select material handling and worker elevating methods and equipment	Coordinate permits, inspections, and sub-trades	Complete planning work sheets
	6239.16	6239.17	6239.18	6239.19	6239.20
	Communicate with				
	others 6239.21				

NSTALL AND START UP AIR COOLING (AC) AND HEAT PUMP (HP)	Inspect AC and HP at site	Perform a site evaluation	Prepare work site	Prepare site for installation	Assemble and install AC and HP components and accessories
6240.0	6240.01	6240.02	6240.03	6240.04	6240.05
	Braze and solder AC and HP piping	Check AC and HP system for leaks	Evacuate and dehydrate system	Wire-in AC and HP	Charge AC and HP system with refrigerant
	6240.06	6240.07	6240.08	6240.09	6240.10
	Set and verify AC and HP electrical, electronic, and automated control systems	Check and adjust air flow, water, and glycol levels	Verify charging of AC and HP system	Verify AC and HP system operating parameters	Commission AC and HP system
	6240.11	6240.12	6240.13	6240.14	6240.15
	Complete AC and HP installation and start-up documentation				
	6240.16				

SERVICE OR MAINTAIN AIR COOLING (AC) AND HEAT PUMP (HP)	Troubleshoot AC and HP accessories and components	Replace or repair AC and HP accessories and components	Replace or repair system zoning components	Repair or replace AC and HP operating and safety controls	Clean or replace AC and HP electrical components
6241.0	6241.01	6241.02	6241.03	6241.04	6241.05
	Test or replace AC and HP electronic components	Rewire and repair AC and HP system wiring	Clean or replace actuator and damper/zone controls	Repair or replace refrigerant flow and metering devices	Clean and replace heat transfer devices, coils, and heat exchangers
	6241.06	6241.07	6241.08	6241.09	6241.10
	Adjust and replace heat transfer medium	Test or replace AC and HP electrical heaters, HRV/ERV and electronic air cleaners	Replace or repair system piping	Replace or repair AC and HP condensate drains and accessory components	Check system for leakage
	6241.11	6241.12	6241.13	6241.14	6241.15
	Replace air cooling compressor	Clean or replace AC and HP filter system and components	Replace or repair the air side of AC and HP equipment	Replace or repair air handler components	Replace or repair AC and HP fans and motors
	6241.16	6241.17	6241.18	6241.19	6241.20
	Check operations and functions of total AC and HP system	Complete AC and HP service and maintenance records	Clean up work site		
	6241.21	6241.22	6241.23		

INSTALL AND COMMISSION REFRIGERATION AND AIR CONDITIONING (R&AC) SYSTEM	Read and interpret R&AC installation and start up documentation	Inspect R&AC system, accessories, and components at work site	Perform a work site evaluation	Prepare work site	Coordinate permits, inspections, and sub-trades
6242.0	6242.01	6242.02	6242.03	6242.04	6242.05
	Prepare site for installation	Assemble and install R&AC system, accessories, and components	Assemble R&AC piping and components	Join and install R&AC piping	Check refrigerant piping for leaks
	6242.06	6242.07	6242.08	6242.09	6242.10
	Check component piping for leaks	Assemble and install R&AC electrical system accessories and components	Evacuate and dehydrate R&AC system	Commission R&AC system	Complete the installation and commissioning records
	6242.11	6242.12	6242.13	6242.14	6242.15
	Clean up work site 6242.16				
MAINTAIN REFRIGERATION AND AIR CONDITIONING (R&AC) SYSTEM	Troubleshoot R&AC systems and components	Clean and maintain R&AC filters and components	Clean and maintain R&AC condenser, evaporator, and accessory components	Clean and maintain R&AC humidifier and components	Clean or replace R&AC electrical components
6243.0	6243.01	6243.02	6243.03	6243.04	6243.05
	Check operation and functions of total R&AC system	Clean up work site	Complete R&AC maintenance documentation		
	6243.06	6243.07	6243.08		

SKILLS

SERVICE REFRIGERATION AND AIR CONDITIONING (R&AC) SYSTEM	Check R&AC system accessories and components	Replace or repair R&AC mechanical components	Repair or replace R&AC condensate components	Repair or replace R&AC piping, accessories, and components	Repair or replace R&AC refrigerant system, components, and accessories
	Repair or replace R&AC open, semi- hermetic, or hermetic compressor	Repair or replace R&AC fans and components	Repair or replace R&AC pneumatics	Replace R&AC controls and switches	Repair or replace Variable Air Volume (VAV) components
	6244.06 Repair or replace R&AC metering devices	Replace or repair R&AC electrical and electronic system and components	Decommission packaged R&AC equipment	Decommission split-system R&AC equipment	6244.10 Decommission R&AC equipment for demolition
	6244.11 Clean up work site	6244.12 Complete servicing documentation	6244.13	6244.14	6244.15
	6244.16	6244.17			
PERFORM CUSTOMER SERVICE	Determine nature of service or maintenance call	Conduct a site evaluation	Perform a diagnostic inspection	Estimate costs of service or maintenance call	Complete service or maintenance schedule
6245.0	6245.01 Complete job work order	6245.02 Instruct clients	6245.03	6245.04	6245.05

6245.07

6245.06